


TILE-EZ™ Glue-In Drain Assembly

Instructions – ANGÉ Tile-EZ Pan using Tile-EZ Glue-In (aka Solvent Weld) Connection for 2" PVC with 18 Gauge Round Strainer Cover

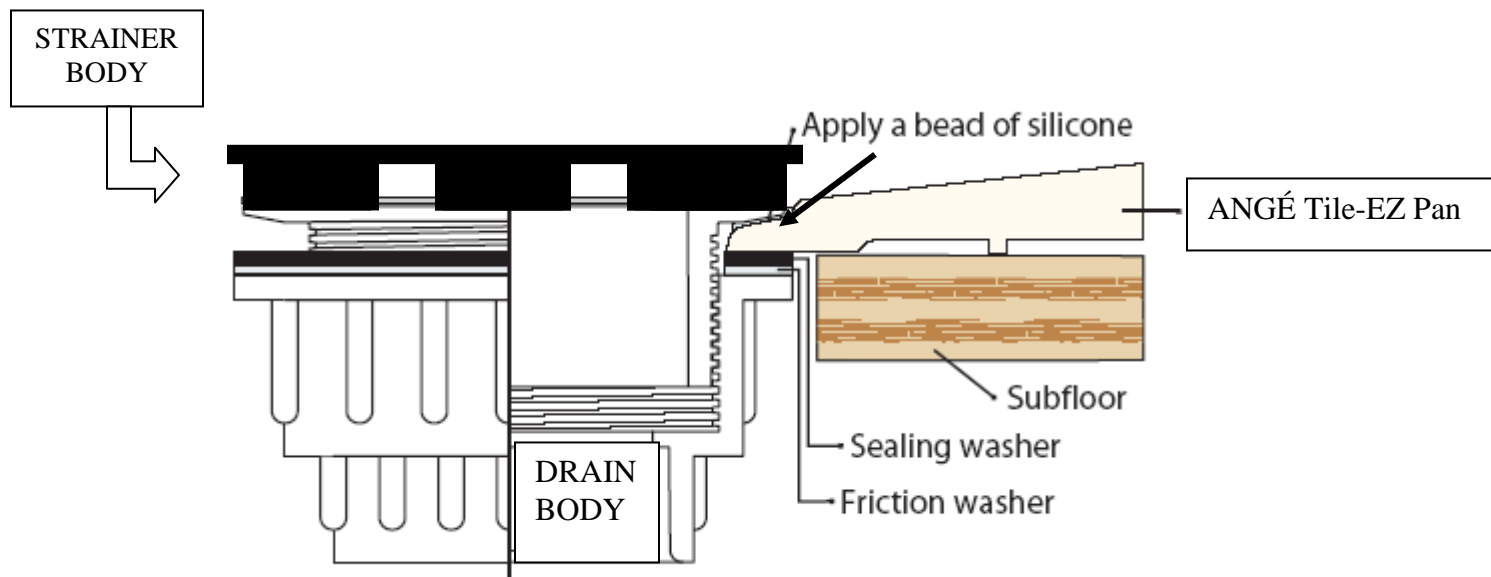

Installation:

1. Unscrew drain into two pieces:
 - Strainer Body as one half
 - Drain Body and loose Gaskets (Sealing & Friction Washers) as second half
2. Install Strainer Body to top side of shower pan. Apply SILICONE between plastic edge of Strainer & Surface of Tile-EZ Shower Floor
3. Place Paper Gasket on top of plastic lip of Drain Body, then Rubber Gasket on top paper.
4. Thread Drain Halves together and tighten.
5. Always follow local plumbing codes.

Adjustment of Strain Cover to Different Heights:

Available is an extension kit which includes multiple strainer height gaskets. If height needs to be higher, simply unscrew the top of the Strainer Cover and insert Height Gaskets included in optional kit. If for some reason, height needs to be lower, simply remove the gaskets that are not perforated from the strainer body in drain assembly. The perforated Gasket, which incorporates a secondary drainage system, should not be removed from the Strainer Body.

Technical Support / Questions
Tel: 856-673-8747
Fax: 856-235-5410
Email: ANGEPAN@Tile-EZ.com

www.Tile-EZ.com